 


---

# Integrity™ AirMasseur® Control

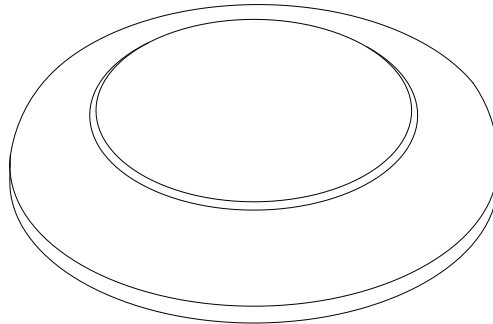

---

## **BLOWER & CONTROL SYSTEM**

Jason's Integrity™ AirMasseur® system includes a quiet 1 HP, variable speed blower with an automatic air heater, electronic control with a 20-minute timer and automatic purge and dry cycle, and a bather friendly air switch activated control button.

## **BLOWER ON/OFF, SPEED AND SPEED CONTROL**

All Jason Integrity™ air baths are provided with an air switch conveniently located for bather operation. This switch controls both the On/Off and blower speed functions. To start and stop the air blower, simply momentarily press and release the air switch button. The blower will always start at its highest speed.

Once the blower is On, to decrease or increase air output, depress and hold the control button down until the desired setting is reached, then release.

## **AUTOMATIC PURGE CYCLE**

 
Fifteen(15) minutes after being stopped, the air blower will automatically start for two (2) minutes to purge and dry the air channel.

## **AUTOMATIC HEATER**

The air heater incorporated in the air blower will automatically operate when the blower is On to help maintain the temperature of the bath water.

## **REMOTE MOUNTING OF AIR BLOWER**

The air blower can be remotely mounted up to 15 feet from the bath. The air switch tube supplied with the bath must be replaced with Jason's part number 8707-01-001, 15 foot air tube, and the air blower is replumbed using 1-1/2" PVC piping. See the Installation Manual.

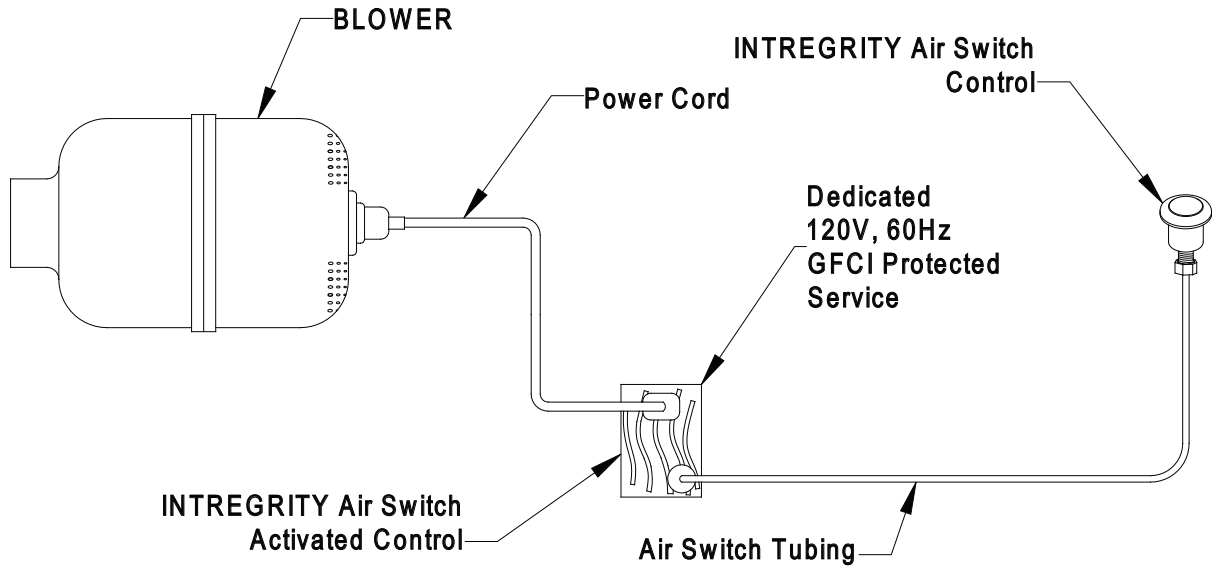

---

#### STANDARD FEATURES

- The Jason Integrity™ AirMasseur® operation is controlled by an air switch placed for easy use by the bather. This switch controls both the On/Off and Speed functions of the air blower.
- 20-minute system timer.
- Air Purge feature. Fifteen minutes after the air blower is stopped and with the bath drained, the blower will start and run for two minutes to purge and dry the air channel.
- The Air Switch activated control is designed to plug into a dedicated circuit for easy installation and maintenance.

#### SPECIFICATIONS

- Blower:** 1Hp, 120V, 60Hz, with integral air heater and control.
- Electrical Service:** Dedicated service(s) protected by ground fault interrupter is required. 120v, 60Hz, 15A.