



BDWSLTP BDWSLTP-PIPE

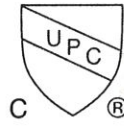

INSTALLATION INSTRUCTIONS

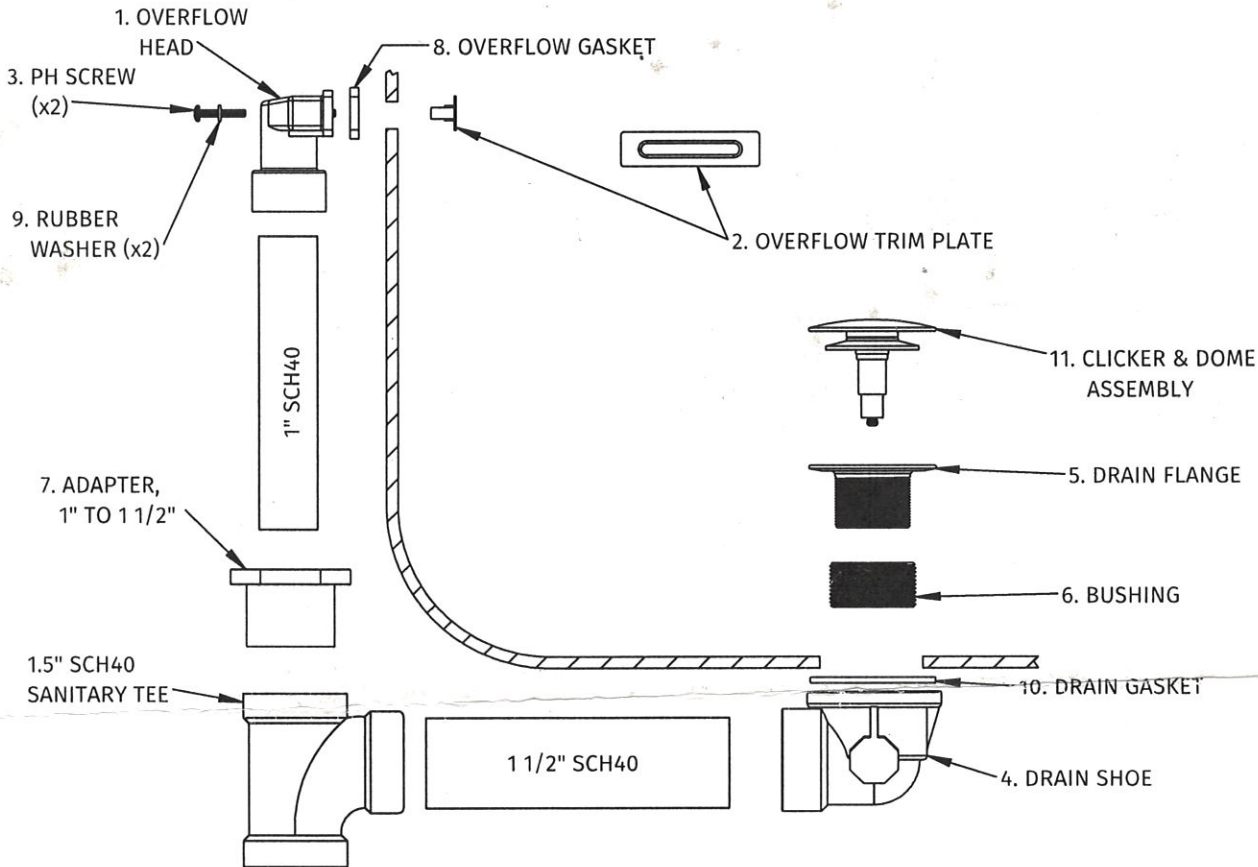

1. LOOSELY FASTEN THE OVERFLOW HEAD (1) TO THE TUB USING THE TRIM PLATE (2) AND THE TWO PHILLIPS HEAD SCREWS (3).
2. LOOSELY FASTEN THE DRAIN SHOE (4) TO THE TUB USING THE DRAIN FLANGE (5) W/ BUSHING (6) INSTALLED.
3. MEASURE AND CUT PIPE TO LENGTH IF NEEDED. USE THE 1" TO 1 1/2" ADAPTER (7) TO CONNECT THE OVERFLOW.
4. ASSEMBLE PLASTIC FITTINGS USING THE APPROPRIATE SOLVENT GLUE.
5. ENSURE THE OVERFLOW GASKET (8) IS IN PLACE. ENSURE THAT FLAT RUBBER WASHERS (9) ARE IN PLACE UNDER SCREW HEADS.
6. **GENTLY** TIGHTEN THE SCREWS (3) TO FASTEN THE OVERFLOW.
7. ENSURE DRAIN GASKET (10) IS IN PLACE. UNSCREW THE CLICKER & DOME ASSEMBLY (11) FROM THE DRAIN FLANGE (5). APPLY 100% SILICONE SEALANT UNDER THE FLANGE OF THE DRAIN AND SCREW INTO THE DRAIN SHOE (4). USE A STRAINER WRENCH TO TIGHTEN SECURELY.
8. REPLACE THE CLICKER & DOME ASSEMBLY (11). CHECK FUNCTION AND TEST FOR LEAKS.

NOTE: ENSURE THAT THE TUB'S WEIGHT WILL NOT REST ON THE DRAIN SHOE OR OTHER COMPONENTS OF THE WASTE & OVERFLOW ASSEMBLY ONCE THE TUB IS INSTALLED.

WARRANTY

FOR WARRANTY INFO PLEASE VISIT WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

www.mountainplumbing.com 888-222-9140 fax 972-456-2719

1/24/2022

form BDWSLTP inst sht